

# **LED Thermostatic Shower Faucet Installation Manual**

**W-9(ES)**

# Warranty Duration

All parts of this faucet system are warranted to the original purchaser to be free from defects in material and workmanship under a lifetime limited warranty.

# Repair and Replacement

If the product exhibits defects in material or workmanship under normal use and within the warranty coverage, we will, at our discretion, either repair the product or provide a replacement at no cost to the original purchaser. Please note that proof of purchase (e.g., an invoice) must be presented when requesting service. The warranty does not cover damages resulting from improper installation, misuse, or modifications.

# Exclusions

We shall not be responsible for the following cases:

- Damage to the product caused by improper installation, misuse, unauthorized repair or replacement, or abuse (including damage during shipment).
- Damage to the product caused by improper dismantlement after installation.
- Damage resulting from abnormal water pressure and impurities in water pipes is not covered under this warranty.
- Rust on the product due to insufficient care and maintenance is not covered under this warranty.
- Damage caused by natural disasters such as fire, flood, earthquake, electric storms, etc., is not covered under this warranty.

I hope this helps! If you have any further questions or concerns, please let me know.

# Having Trouble? Contact us.

✉ Email: [info@faucetsupport.com](mailto:info@faucetsupport.com)

☎ Toll Free: 1-888-969-6880



**CEC** **FC** **C** **€** **RoHS**



**M6287**  
**SFS-1029**  
**Model:A**

## **CONTENT**

---

**1.Installation Manual for LED Thermostatic Shower Set -----(1-11)**




## **CONTENIDO**

---

**1.Instrucciones de instalación del conjunto de ducha  
termostática LED -----(12-22)**

## ◆ Installation and Maintenance Matters

1. Check the accessories list to verify that all parts are complete in this package.
2. Do not disassemble the main body by yourself.
3. Connect inlet pipes to supply valves.
4. Make sure inlet pipes and supply valves have no impurities and are cleaned, with no impurities in the pipeline.
5. After installation, check all joints for leakages.
6. Do not leave the rain shower system exposed to a severely corrosive environment.

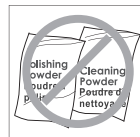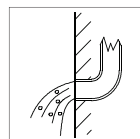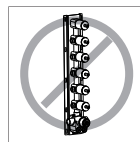



### Do's

1. In order to keep the mixer surface bright, please clean the mixer regularly.
2. Rinse the faucet with clean water and wipe it with a soft cotton cloth.
3. Use one of the following cleaners to remove dirt from the surface:  
a. Mild liquid cleaner.  
b. Colorless glass cleaner and powder cleaner that do not cause abrasion and can be dissolved completely.  
c. Polish liquid that does not cause abrasion.

### Don'ts

- a. Avoid using cleaning powder, harsh cleaning chemicals, brushes and coarse cloth to prevent scratching and friction.
- b. Do not use acid cleaners to clean the faucet as they may cause surface corrosion of the faucet. If the faucet is exposed to harmful acid substances, please rinse it immediately with water.

### Tools Needed:






## ◆ 6-Function Luxury Thermostatic Shower Faucet


Model:A

### Accessories List

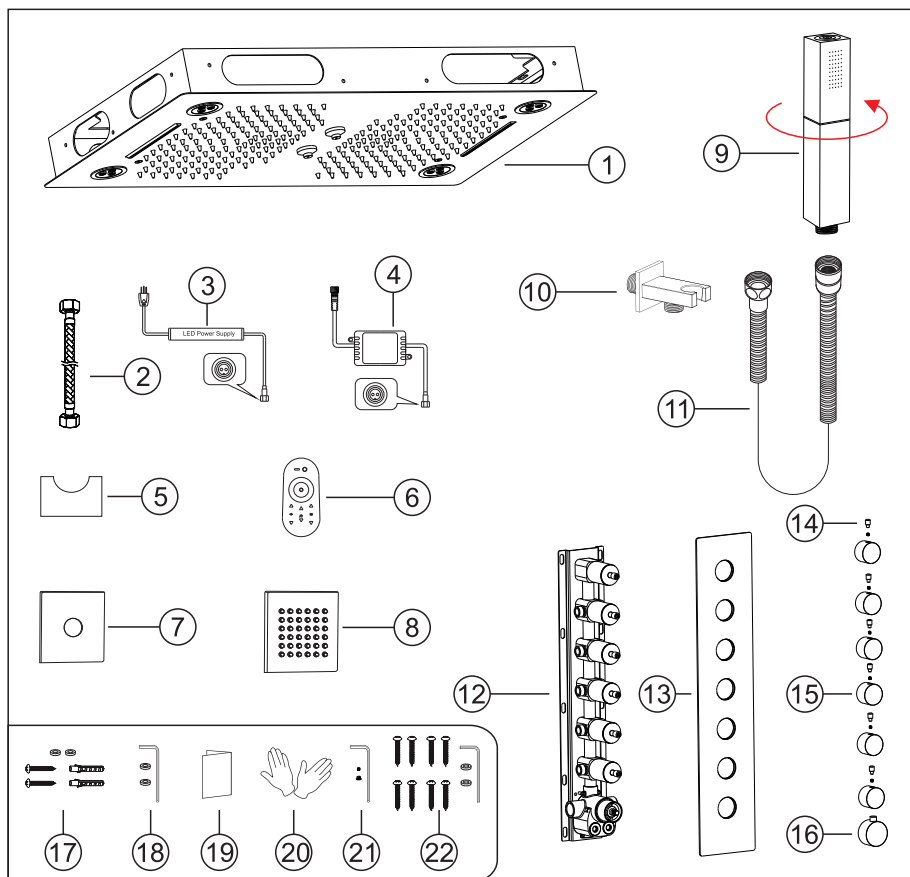


| No. | Part name                | Qty | No. | Part name                 | Qty  |
|-----|--------------------------|-----|-----|---------------------------|------|
| 1   | Shower head body         | 1   | 12  | Main body                 | 1    |
| 2   | Shower head hose         | 4   | 13  | Deck plate                | 1    |
| 3   | Water proof power supply | 1   | 14  | Water diverter rod        | 6    |
| 4   | Wifi Controller          | 1   | 15  | Water diverter            | 6    |
| 5   | Controller pedestal      | 1   | 16  | Handle                    | 1    |
| 6   | LED Controller           | 1   | 17  | Main body spare parts     | 10   |
| 7   | Body jet cover           | 6   | 18  | Holder parts              | 1set |
| 8   | Body jet                 | 6   | 19  | Instruction manual        | 1    |
| 9   | Hand shower              | 1   | 20  | Gloves                    | 2    |
| 10  | Hand shower holder       | 1   | 21  | Handle parts              | 1set |
| 11  | Shower hose              | 1   | 22  | Shower head screw package | 1set |

## ◆ Essential Dimensions & Water Pipe Line

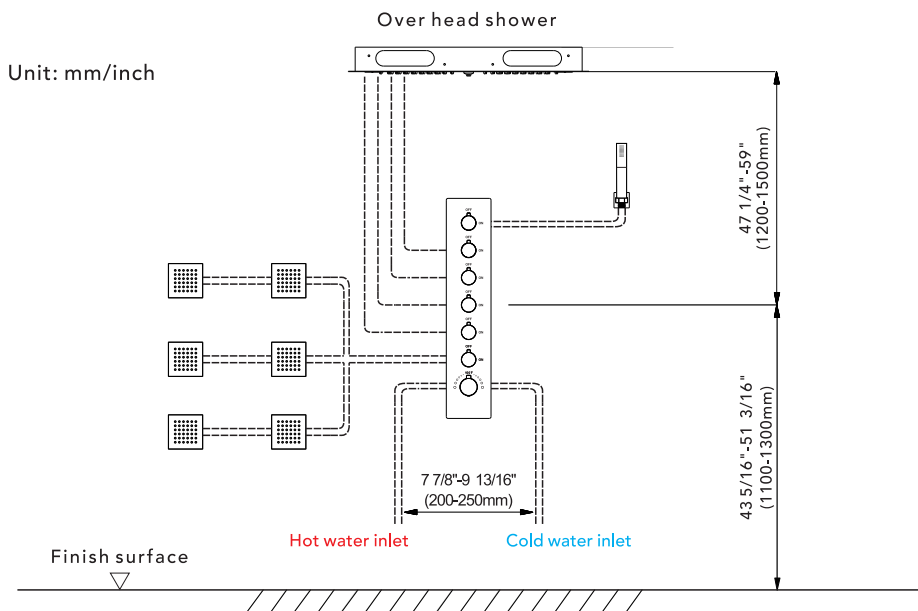


## ◆ The Installation Depth of Shower Holder and Body Jet

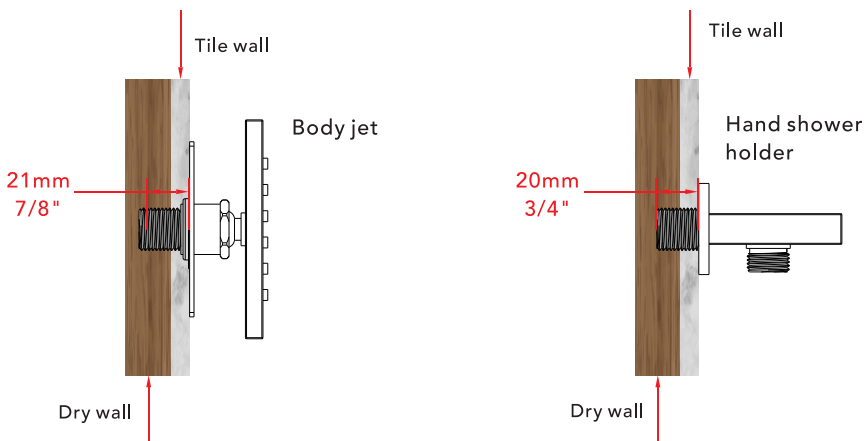

The thickness of the tile must be calculated for installation.


Connector size of male thread: USA: 1/2"-14NPT, Canada: 1/2"-14NPT, Europe: G1/2".

## ◆ Installation Depth of Main Body

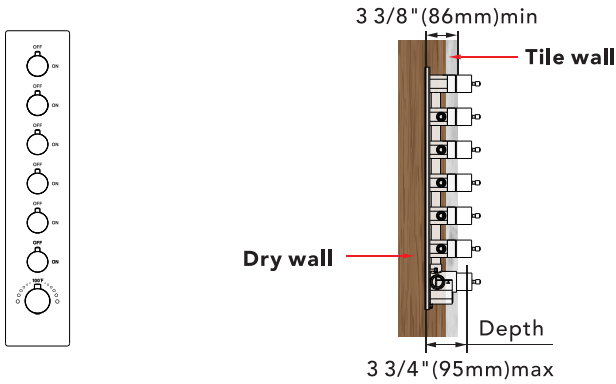


- Notice: 1. The installation depth of the main body should be no less than 3 3/8" (86mm) and no more than 3 3/4" (95mm), including the thickness of the tile. Otherwise, the deck plate cannot be installed.
2. The opening size of ceramic tile shall be smaller than the deck plate size.

## ◆ Piping Instructions Before Tiling

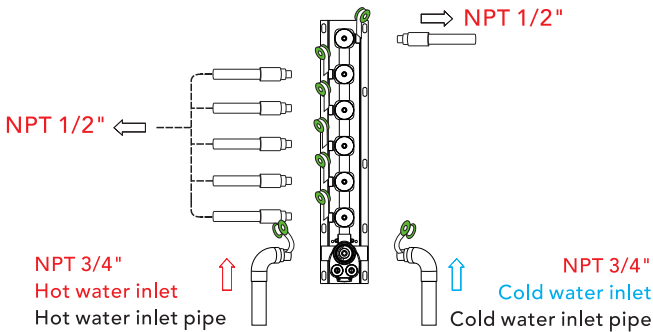

1. As shown in the figure, the inlet and outlet pipes are pre-buried. Please pay attention to the correct direction when installing the pre-buried main body.
2. Before tiling, turn on the water to test whether the left and right inlet pipes are tightly connected without leakage. Then, adjust the flow switch to the "on" position to check for leaks in the mixed outlet pipes.

## ◆ Body Jets Installation

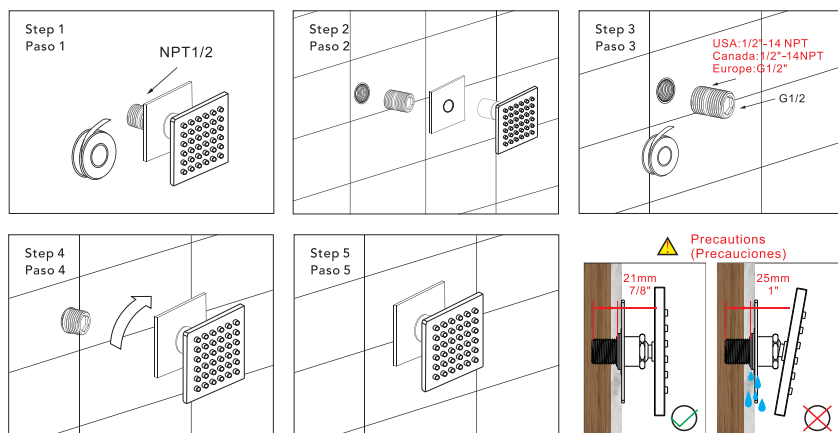


Step 3: Wrap the threaded pipe of NPT1/2 with Teflon tape and screw it into the wall.

Step 4: Screw the massage body jet onto the wall.

Step 5: The installation is complete

## ◆ Installation the Hand Shower Holder

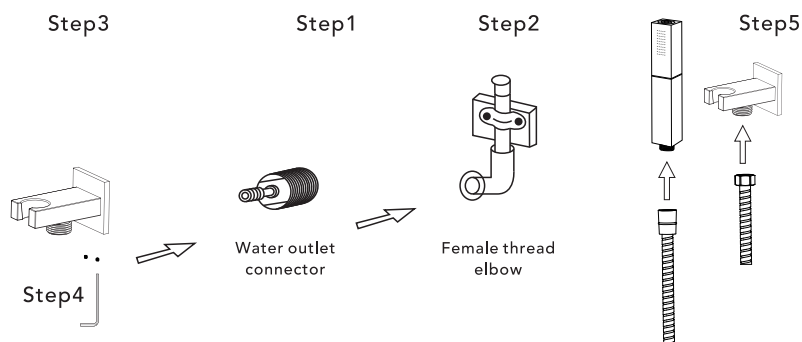

Step1. Unscrew the shower holder and remove the connector.

Step2. Install the connector onto the reserved water pipe outlet and tighten it.

Step3. Attach the shower holder to the connector and securely retighten the screws.

Step4. Connect the shower hose correctly to both the handheld showerhead and the outlet at the bottom of the shower holder.


## ◆ Plumbing Layout of Shower Head

①

USA: 1/2"-14NPT

Canada: 1/2NPT


Europe: G1/2"

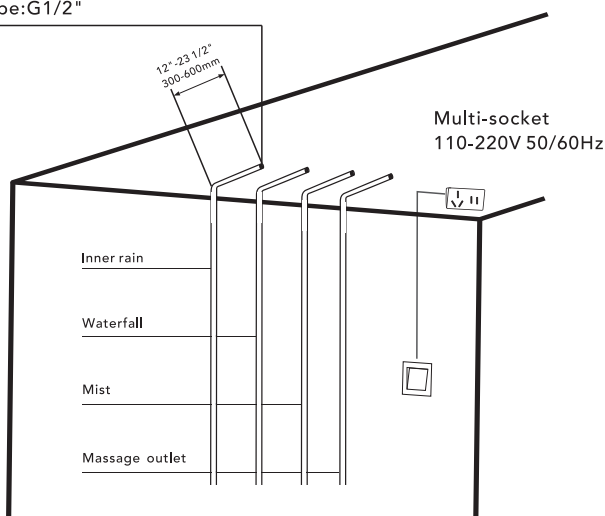

Install the power switch in the appropriate position, lay out the water pipeline, and connect it to the main body.


## ◆ Holes on Ceiling

②

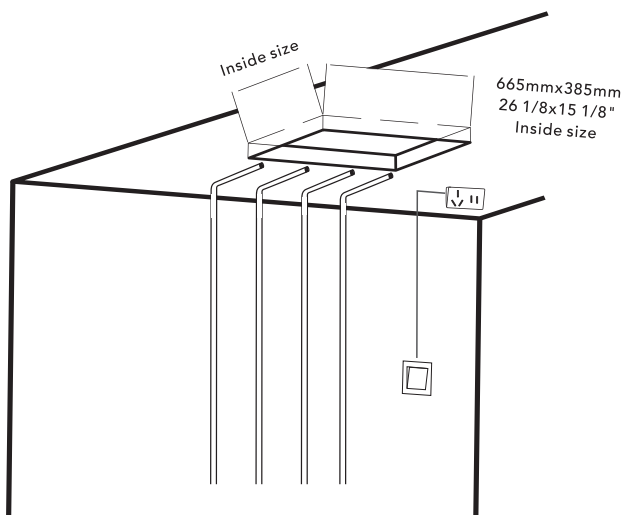

◆ Shower Head Exploded View

③

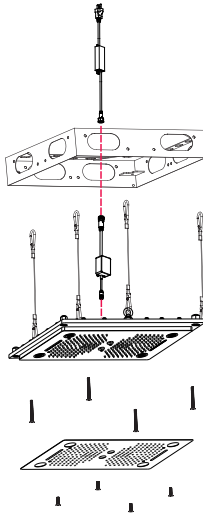

Waterproof power supply

Stainless steel fix frame

WiFi connection


Shower head body

Decorative shower panel

According to the mark (Remove/Install) on the top of the shower head panel, unscrew the decorative shower panel, shower head body, and fix frame respectively.

◆ Fix Frame Installation

④

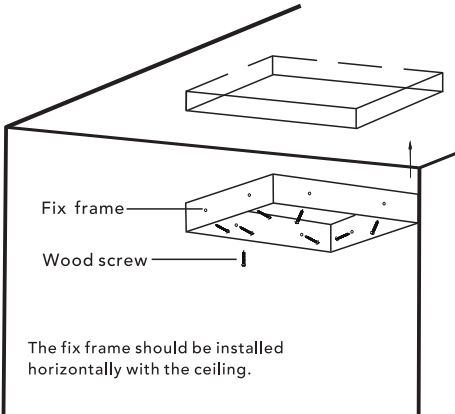


The fix frame should be installed horizontally with the ceiling.

Fasten the fix frame to the wooden frame with screws


◆ Layout for power

⑤

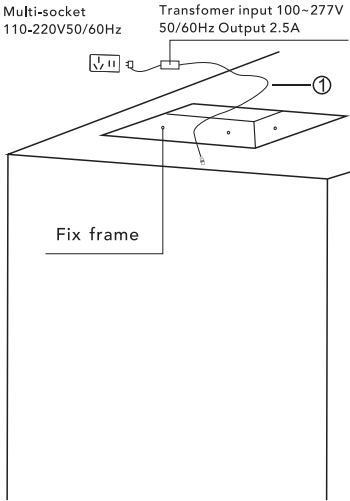


◆ LED (Single Line) Connection

⑥

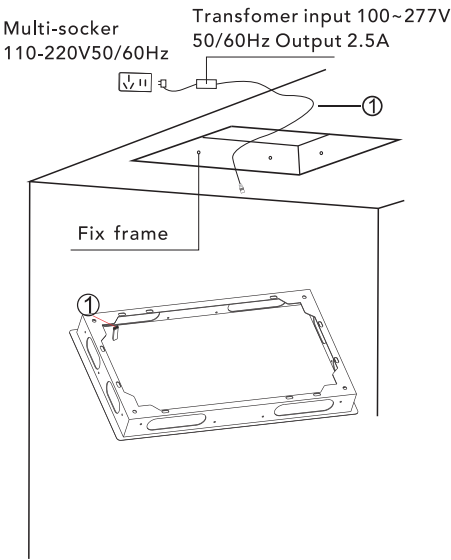


- ①To attach the WiFi controller, wrap it with adhesive tape to prevent it from falling off.
- ②To connect the power supply and WiFi

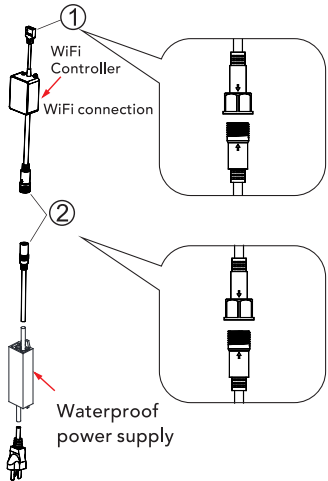


◆ Shower Head Body Installation

⑦

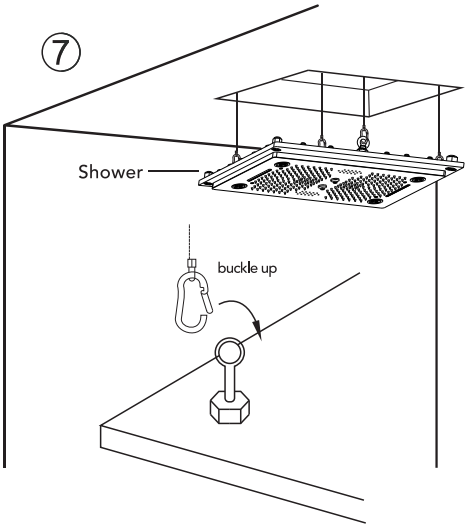


◆ Layout for Water Pipe

⑧

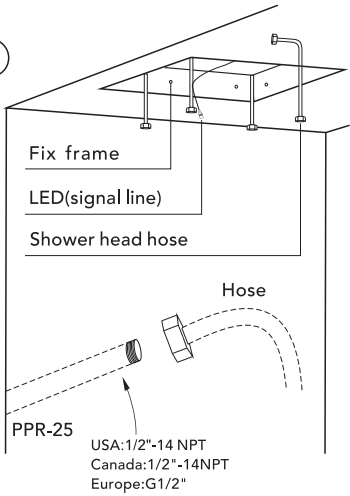


Connect one end of the corrugated pipe to the embedded PPR water pipe and the other end to the water inlet pipe on the back of the shower head.


## ◆ Water Inlet Pipe Connection

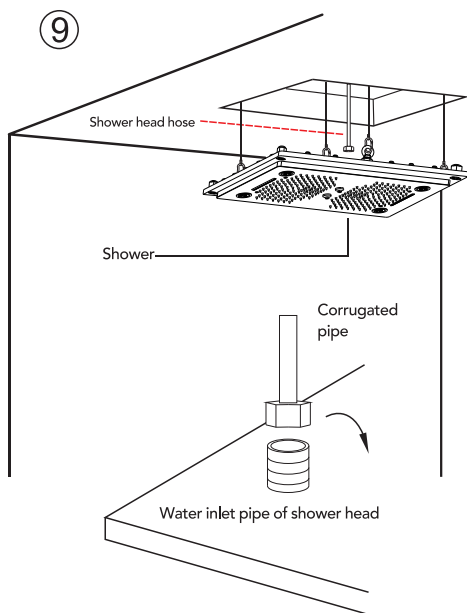


## ◆ Water Testing

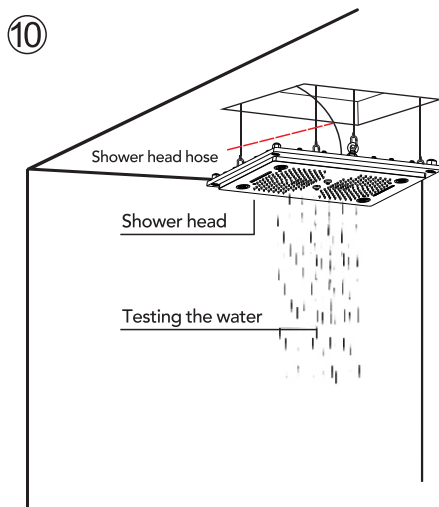

## ◆ Shower Head Installation

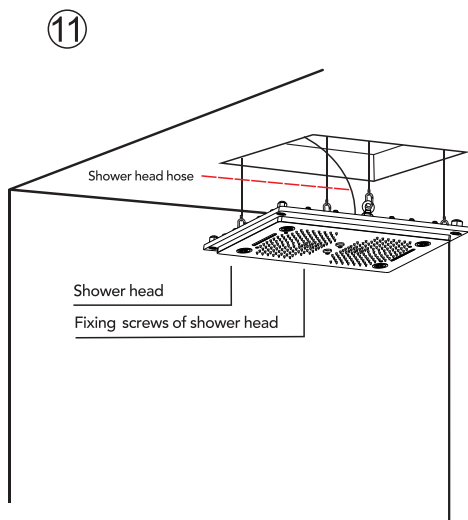

## ◆ Decorative Shower panel Installation

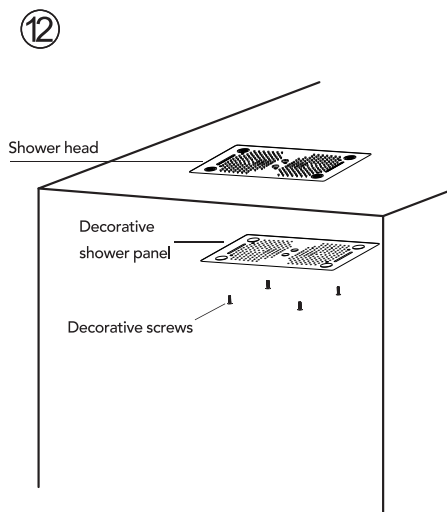




◆ LED Touch Remote Instruction

The touch remote has 9 touch keys, each of which functions as follows:

Controller connections shown:

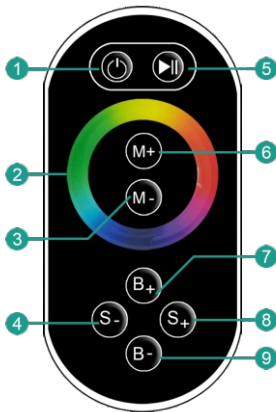

- ① Turn ON/OFF
  - ⑤ Mode Switch
  - ② Color Touch Ring
  - ③/⑥ Color Temperature adjusting
  - ④/⑧ Dynamic Speed adjusting
  - ⑦/⑨ Dynamic Brightness adjusting
- Mode:

| NO. | FUNCTION          | REMOTE                                              |
|-----|-------------------|-----------------------------------------------------|
| 1   | Static red        | Brightness is adjustable.<br>speed is unadjustable. |
| 2   | Static green      |                                                     |
| 3   | Static blue       |                                                     |
| 4   | R G B Jumping     |                                                     |
| 5   | Static blue-green |                                                     |
| 6   | Static yellow     |                                                     |
| 7   | Static white      |                                                     |
| 8   | Static purple     | Brightness is adjustable<br>Speed is adjustable     |
| 9   | R G B Gradual     |                                                     |
| 10  | 7-Colors Jumping  |                                                     |
| 11  | 7-Colors Gradual  |                                                     |

2. Power supply management:

The remote will enter standby mode (untouchable state) if pressed for more than 20 seconds. If this occurs, please slightly shake it once and the remote will return to normal working state (touchable state).

3.Indicator light instruction:




- 3.1.When the PWR indicator light is bright, the remote is either idle or sending a signal; when the PWR light is off, it will enter standby mode.
- 3.2.When RF is bright,it means the remote is sending signal; off means there is no signal sending.

Remarks:

- 1.This product should be commissioned and installed by qualified personnel.
- 2.This product cannot be waterproof; it needs to be protected from sun and rain. If installed outdoors, please use a waterproof box.
- 3.Good heat dissipation conditions will extend the life of the LED controller. Please install the product in a well-ventilated environment
- 4.Please do not install or use such products in lightning, thunder, strong magnetic or high voltage applications.
- 5.Please check whether the output voltage of the LED power supply used meets the product voltage range requirements.
- 6.The diameter of the wire used must be sufficient to support the connected LED luminaire, and ensure that the wiring is secure to avoid the wire overheating or poor contact triggering an accident.
- 7.Before power-on debugging, ensure that all wiring is correct to avoid damage to the luminaire due to wiring errors.

## ◆ Instalación y cuestiones de mantenimiento

1. Verifique la lista de accesorios para comprobar que todas las partes están completas en este paquete.
2. No desmonte el cuerpo principal por sí mismo.
3. Conecte las tuberías de entrada a las válvulas de suministro.
4. Asegúrese de que las tuberías de entrada y las válvulas de suministro no tengan impurezas y estén limpias, sin impurezas en la tubería.
5. Después de la instalación, verifique todas las uniones para detectar fugas.
6. No deje el sistema de ducha tipo lluvia expuesto a un ambiente severamente corrosivo.

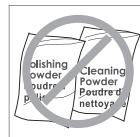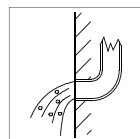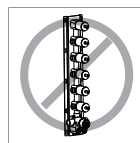



### Hacer

1. En para mantener la superficie de la batidora brillante, limpie el mezclador regularmente.
2. Inse el grifo con agua limpia y límpielo con un suave ropa de algodón.
3. Utilice uno de los siguientes limpiadores para eliminar la suciedad de la superficie: a. Limpiador líquido suave. b. Limpiador de vidrio incoloro y limpiador en polvo que no causen abrasión y que se puedan disolver completamente. c. Líquido pulidor que no cause abrasión.

### No es decir

- A. Valte con polvo de limpieza, productos químicos de limpieza duros, cepillos y tela gruesa para evitar rascar y fricción.
- B. No use limpiadores de ácidos para limpiar el grifo, ya que pueden causar corrosión superficial del grifo. Si el grifo está expuesto a sustancias ácidas dañinas, enjuague inmediatamente con agua.


## HERRAMIENTAS NECESARIAS:



◆ **Grifo de Ducha Termostático de Lujo con 6 Funciones**

**Modelo:A**


**Lista de Accesorios**

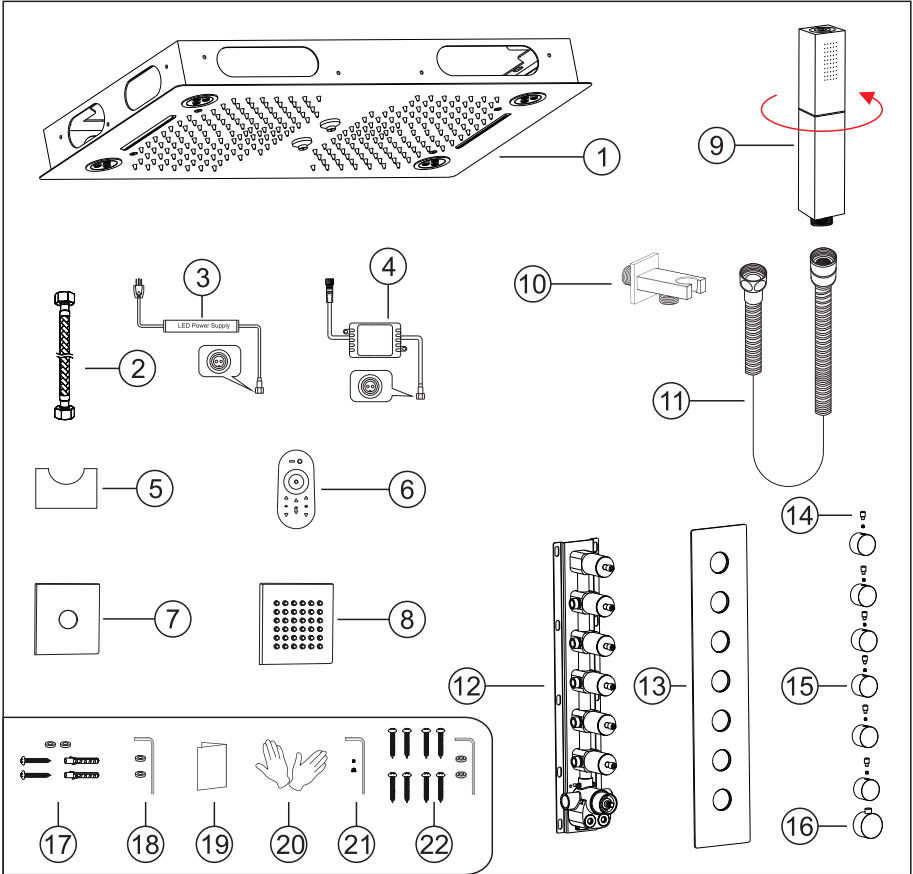


| N.º | Nombre de la pieza            | Cant. | N.º | Nombre de la pieza                        | Cant. |
|-----|-------------------------------|-------|-----|-------------------------------------------|-------|
| 1   | Cuerpo del cabezal de ducha   | 1     | 12  | Cuerpo principal                          | 1     |
| 2   | Manguera del cabezal de ducha | 4     | 13  | Placa de cubierta                         | 1     |
| 3   | Fuente de alimentación        | 1     | 14  | Varilla del desviador de agua             | 6     |
| 4   | Controlador Wifi              | 1     | 15  | Desviador de agua                         | 6     |
| 5   | Pedestal del controlador      | 1     | 16  | Manija                                    | 1     |
| 6   | Controlador LED               | 1     | 17  | Piezas de repuesto del cuerpo principal   | 10    |
| 7   | Cubierta del chorro corporal  | 6     | 18  | Piezas del soporte                        | 1set  |
| 8   | Chorro corporal               | 6     | 19  | Manual de instrucciones                   | 1     |
| 9   | Ducha de mano                 | 1     | 20  | Guantes                                   | 2     |
| 10  | Soporte para ducha de mano    | 1     | 21  | Piezas de la manija                       | 1set  |
| 11  | Manguera de ducha             | 1     | 22  | Paquete de tornillos del cabezal de ducha | 1set  |

## ◆ Dimensiones esenciales & línea de tubería de agua

Unidad: mm/pulgada

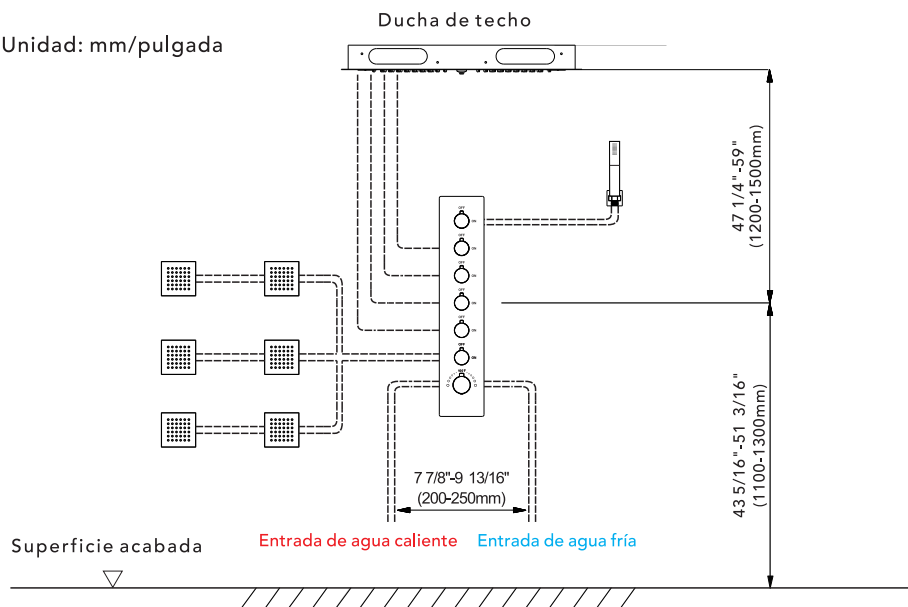


## ◆ La profundidad de instalación del soporte de ducha y del chorro para el cuerpo

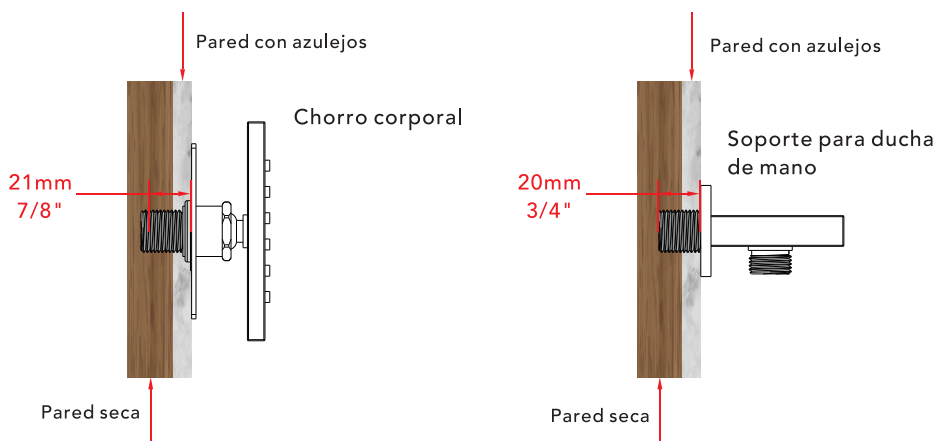


El grosor del azulejo debe calcularse para la instalación. Tamaño del conector de rosca macho: EE.UU.: 1/2"-14NPT, Canadá: 1/2"-14NPT, Europa: G1/2".

## ◆ Profundidad de Instalación del Cuerpo Principal

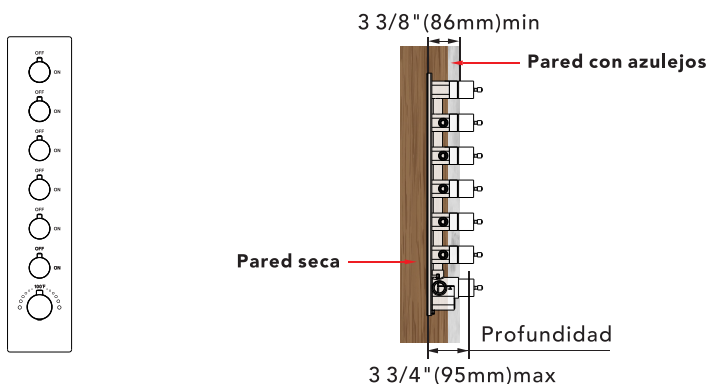

- Aviso: 1. La profundidad de instalación del cuerpo principal no debe ser inferior a 3 3/8" (86 mm) y no más de 3 3/4" (95mm), incluyendo el grosor del azulejo. De lo contrario, la placa de cubierta no podrá ser instalada.
2. El tamaño de apertura del azulejo cerámico debe ser menor que el tamaño de la placa de cubierta.


## ◆ Instrucciones de Tubería Antes de Colocar Azulejos

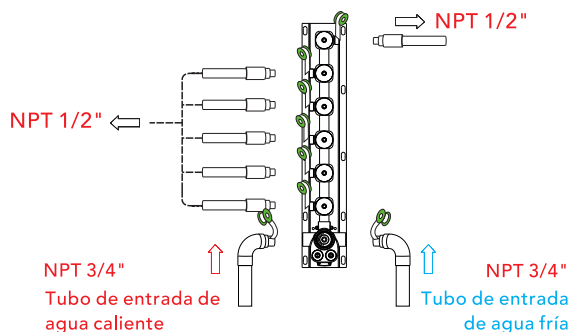

1. Como se muestra en la figura, las tuberías de entrada y salida están pre-enterradas. Por favor, preste atención a la dirección correcta al instalar el cuerpo principal pre-enterrado.
2. Antes de colocar los azulejos, abra el agua para probar si las tuberías de entrada izquierda y derecha están conectadas herméticamente sin fugas. Luego, ajuste el interruptor de flujo a la posición "on" para comprobar si hay fugas en las tuberías de salida mezcladas.)

## ◆ Instalación de la Válvula del Cuerpo Principal


### Paso 1

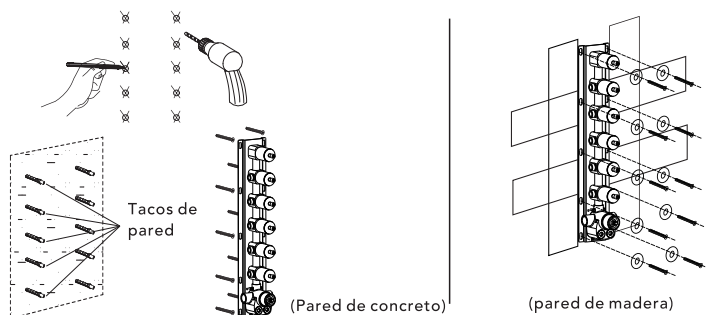

1. Marque según el tamaño de la válvula del cuerpo principal y luego perfore para colocar los anclajes en la pared (pared de concreto).
2. Fije directamente el cuerpo principal a la madera con tornillos (pared de madera).
3. Al instalar el cuerpo principal, por favor marque el lado UP hacia arriba y no lo instale al revés.


▲ Tenga en cuenta que el nivel debe estar paralelo a la pared; de lo contrario, la placa de cubierta no podrá ser instalada.

### Paso 2

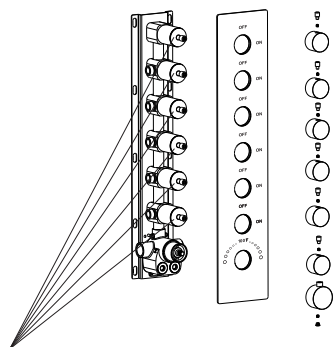

### Précautions pour l'installation du volant


- ※ 1. La línea no puede estar mal colocada; debe mantenerse alineada. De lo contrario, la temperatura del agua de 100°F o 38°C no será correcta.



- ※ 2. Por favor, asegúrese de que el anillo localizador de plástico (A) y el pasador localizador del volante (B) se mantengan en la misma línea con 100°F o 38°C. De lo contrario, la temperatura del agua será incorrecta.


No quite el anillo de desgaste blanco; de lo contrario, el volante se dañará

Control del flujo de agua: girar en sentido horario para disminuir y detener, girar en sentido antihorario para aumentar al máximo.

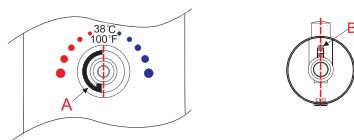

1. Por favor, instale la placa de cubierta, los desviadores de agua y las varillas desviadoras de agua paso a paso.
2. Instale la manija con el tornillo y la tapa de la manija.

## ◆ Instalación de chorros corporales

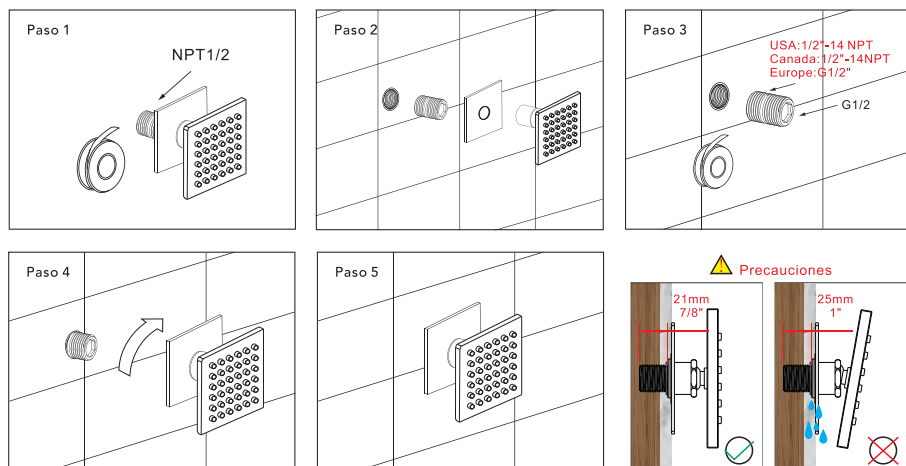


Paso 3: Envuelva con cinta de teflón la tubería roscada de NPT1/2 y atorníllela en la pared.

Paso 4: Atornille el chorro corporal de masaje en la pared.

Paso 5: La instalación está completa.

## ◆ Instalación del Soporte para la Ducha de Mano

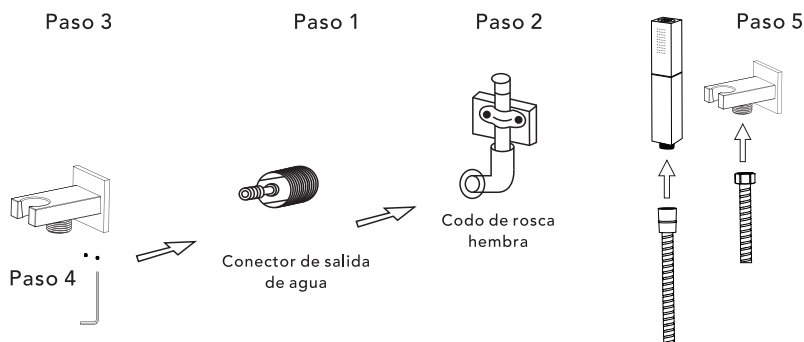

Paso 1: Desatornille el soporte de la ducha y quite el conector.

Paso 2: Instale el conector en la salida de la tubería de agua reservada y ajústelo.

Paso 3: Fije el soporte de la ducha al conector y apriete bien los tornillos nuevamente.

Paso 4: Conecte correctamente la manguera de la ducha tanto al cabezal de ducha manual como a la salida en la parte inferior del soporte de la ducha.


## ◆ Schéma de plomberie du pommeau de douche

①

USA 1/2" - 14NPT

Canada: 1/2NPT


Europe: G1/2"

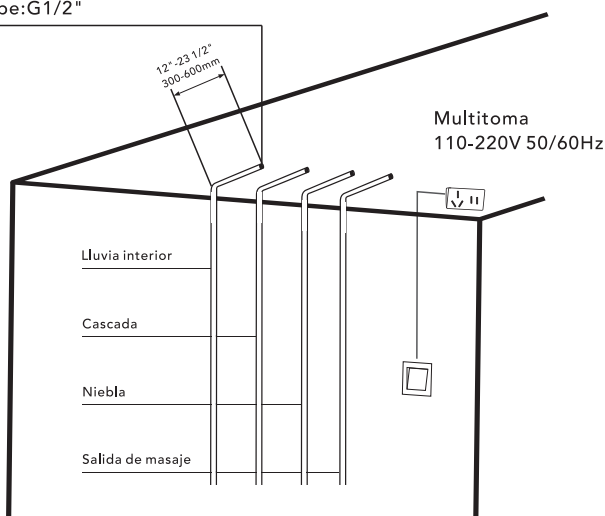

Instale el interruptor de encendido en la posición adecuada, despliegue la tubería de agua y conéctela al cuerpo principal.

## ◆ Trous dans le plafond


②

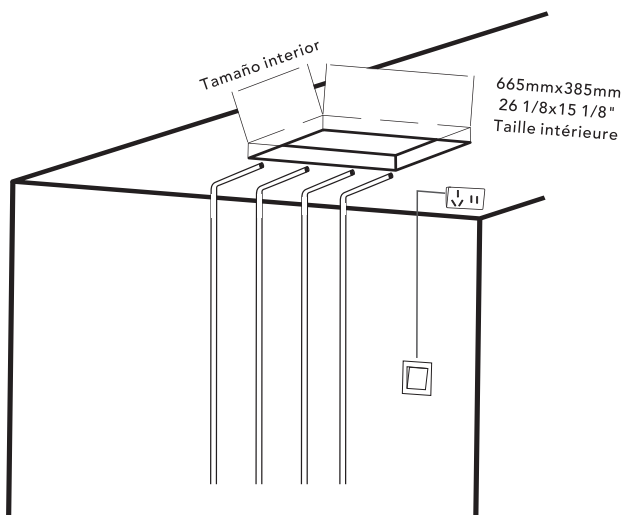



## ◆ Vista explotada del cabezal de ducha

③

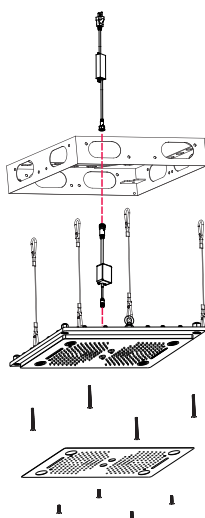

Fuente de alimentación impermeable

Marco de fijación de acero inoxidable

Conexión WiFi


Cuerpo de la cabeza de ducha

Panel decorativo para ducha

Según la marca (Quitar/Instalar) en la parte superior del panel del cabezal de ducha, desatornille el panel decorativo de la ducha, el cuerpo del cabezal de ducha y el marco de fijación, respectivamente.

## ◆ Instalación del marco de fijación

④

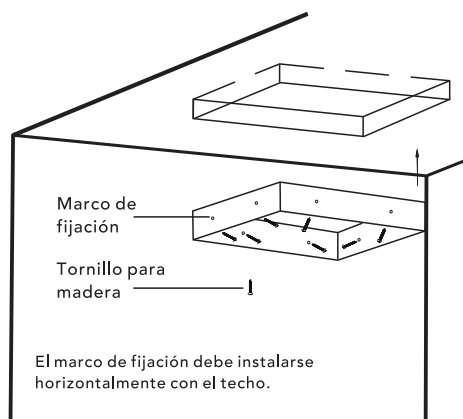


Fije el marco de fijación al marco de madera con tornillos.

## ◆ Distribución de la energía

⑤

Multitoma  
110-220V50/60HZ

Entrada del transformador:  
100-277V 50/60Hz Salida: 2.5A

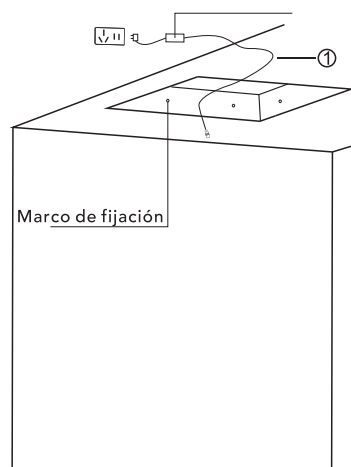


## ◆ Conexión LED (Línea única)

⑥


Multitoma  
110-220V50/60Hz

Entrada del transformador:  
100~277V 50/60Hz Salida: 2.5A

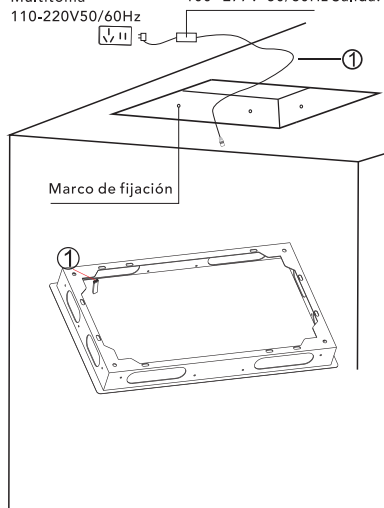


① Para fijar el controlador WiFi, envuélvalo con cinta adhesiva para evitar que se caiga.

② Para conectar la fuente de alimentación y el WiFi

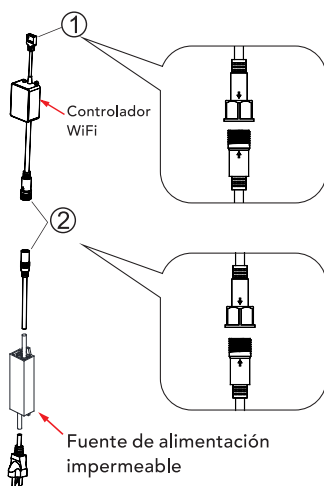


## ◆ Instalación del cuerpo del cabezal de ducha

⑦

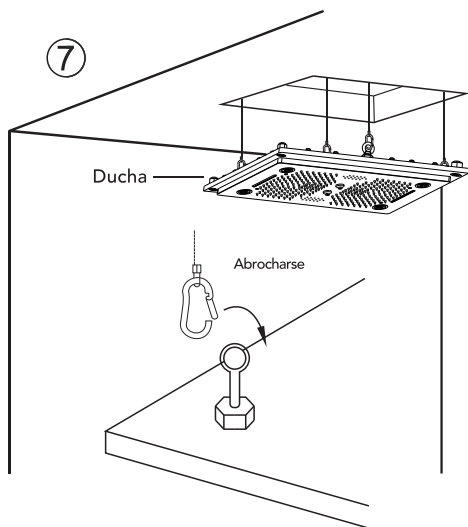

## ◆ Distribución para la tubería de agua


⑧

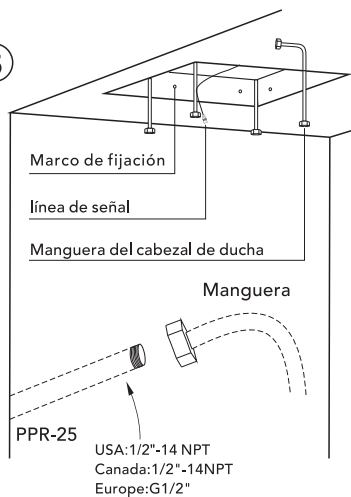

Conecte un extremo de la tubería corrugada a la tubería de agua PPR empotrada y el otro extremo a la tubería de entrada de agua en la parte posterior del cabezal de ducha.

## ◆ Main Body Valve Installation

### Step1

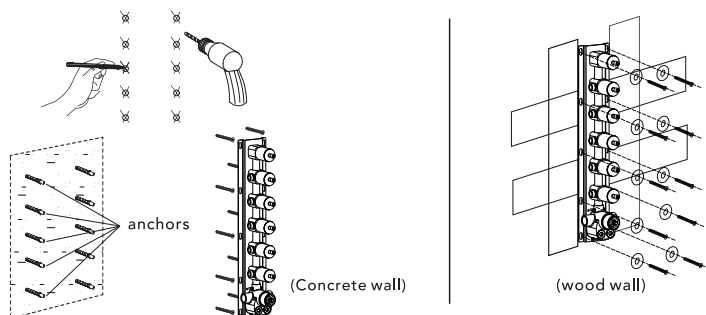


1. Make marks according to the dimensions of the main body valve, then drill anchors into the wall (for a concrete wall).

2. Secure the main body directly to a wood wall using screws.

3. When installing the main body, ensure the "UP" side is facing upwards; do not install it upside down.

▲ Please note: The level meter should be parallel to the wall; otherwise, the deck plate cannot be installed properly.

### Step2

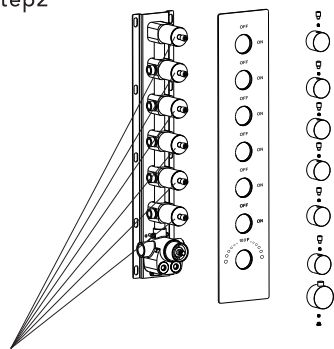

Do not remove the white wear ring; otherwise, the handwheel will be damaged.


Water flow control: clockwise Turn-down and stop , anti-clockwise turn-up to max

### Precautions for Handwheel Installation

※ 1. The line can't be misplaced; it should be kept in line. Otherwise, the water temperature of 100°F or 38°C will not be correct.




※ 2. Please ensure that the plastic locating ring (A) and handwheel locating pin (B) are kept in the same line with 100°F or 38°C. Otherwise, the water temperature will be incorrect.

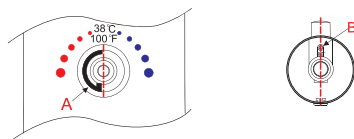


1. Please install the deck plate, water diverters, and water diverter rods step by step.

2. Install the handle with the screw and handle cap.


## ◆ Conexión de la tubería de entrada de agua

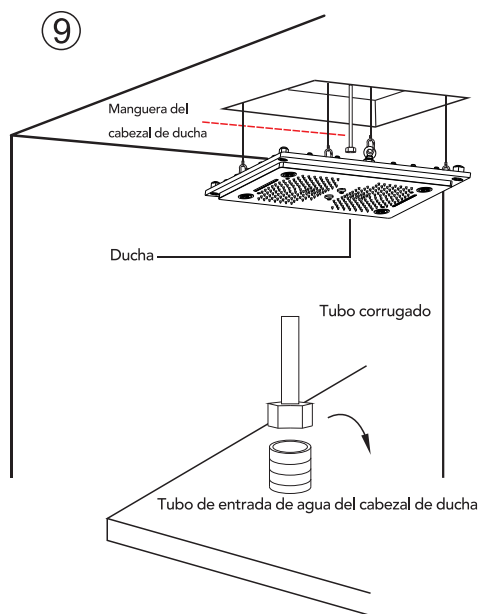


## ◆ Prueba de agua

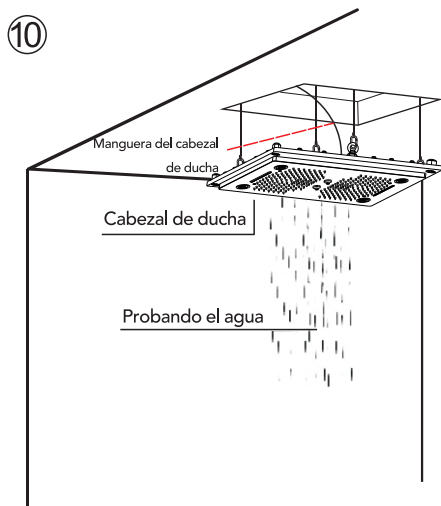

## ◆ Instalación del cabezal de ducha

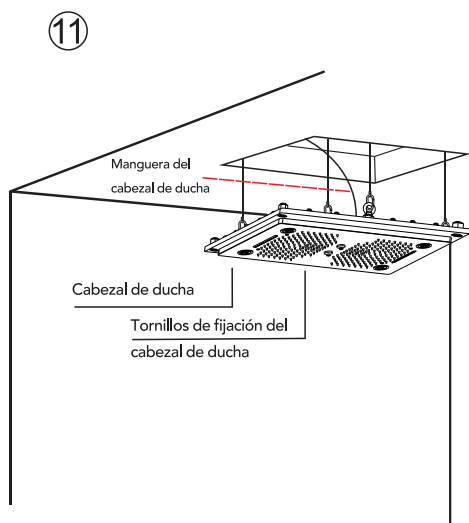


## ◆ Instalación del panel decorativo de la ducha

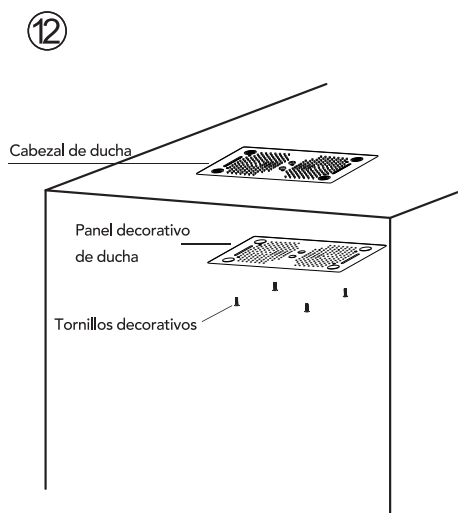

◆ Instrucción remota de LED Touch

El remoto táctil tiene 9 teclas táctiles, cada una de las cuales funciona de la siguiente manera:

Se ilustran las conexiones del controlador:

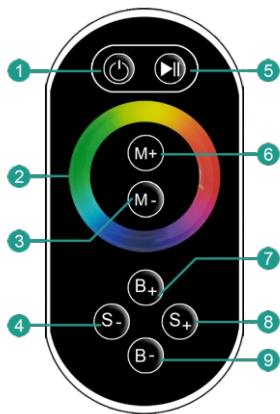

- ① Encender / apagar
- ⑤ Cambio de modo
- ② Anillo táctil de color
- ③/⑥ Ajuste de la temperatura del color
- ④/⑧ Ajuste de velocidad dinámica
- ⑦/⑨ Ajuste de brillo dinámico

Mode:

| NO | FUNCIÓN             | Remoto                                                   |
|----|---------------------|----------------------------------------------------------|
| 1  | Rojo estático       | El brillo es ajustable.<br>La velocidad no es ajustable. |
| 2  | Verde estático      |                                                          |
| 3  | Azul estático       |                                                          |
| 4  | R G B Jumping       |                                                          |
| 5  | Verde azul estático |                                                          |
| 6  | Amarillo estático   |                                                          |
| 7  | Blanco estático     |                                                          |
| 8  | Morado estático     | El brillo es ajustable<br>La velocidad es ajustable      |
| 9  | R G B Gradual       |                                                          |
| 10 | 7 colores saltando  |                                                          |
| 11 | 7-Colors Gradual    |                                                          |

2. Gestión de la fuente de alimentación:

El control remoto ingresará al modo de espera (estado intocable) si se presiona durante más de 20 segundos. Si esto ocurre, por favor, agite ligeramente una vez y el control remoto volverá al estado de trabajo normal (estado táctil).

3. Instrucción de luz del indicador:

- 3.1. Cuando la luz indicadora PWR es brillante, el control remoto está inactivo o envía una señal; Cuando la luz PWR es APAGADO, entrará en modo de espera.
- 3.2. Cuando RF es brillante, significa que el control remoto está enviando señal; OFF significa que no hay señal de envío de señal.

Observaciones:

- 1. Este producto debe ser comisionado e instalado por personal calificado.
- 2. Este producto no puede ser impermeable; Necesita ser protegido del sol y la lluvia. Si se instala Al aire libre, use una caja impermeable.
- 3. Las condiciones de disipación de calor bueno extenderán la vida útil del controlador LED. Instale el producto en un entorno bien ventilado
- 4. Por favor, no instale ni use dichos productos en Lightning, Thunder, Fuerte Magnetic o Alto Aplicaciones de voltaje.
- 5. Por favor, verifique si el voltaje de salida de la fuente de alimentación LED utilizada cumple con el producto  
Requisitos de rango de voltaje.
- 6. El diámetro del cable utilizado debe ser suficiente para soportar la luminaria LED conectada, y asegúrese de que el cableado esté seguro para evitar el sobrecalentamiento del cable o la desencadenante de contacto deficiente un accidente.
- 7. Antes de la depuración de poder, asegúrese de que todo el cableado sea correcto para evitar daños al luminaria debido a errores de cableado.